

Brey-Krause Model R-9043 – Seat Track Adapter

This kit adapts one Porsche 996 or Boxster seat slider in a Porsche 993.

Package Contents

- Front rail mount (2)
- Left rear seat rail mount (1)
- Right rear seat rail mount (1)
- 8 X 20 Flat socket head bolts (8)
- M10 Flange nut (4)

Read this before you begin!

It is the responsibility of the installer to determine the proper wiring interface for the type of seat you are installing.

Proper installation of this part is critical to their functionality and should only be done by a professional shop.

Brey-Krause Manufacturing Co. shall not be held responsible for injury, death, vehicle damage and other types of damage resulting from the use or misuse of our products. This includes improper installation of this product.

Installation Instructions

Step 1

Note: The seat does not have to be removed from the sliders to perform the following operations. Seat was removed for clarity.


Remove the seat stop by pushing out the center pin in the plastic rivet at the back.



Step 2


Use a dremel, grinder, or hack saw to remove the 996 locater pin (shown as point A).

Re-install the seat stop.

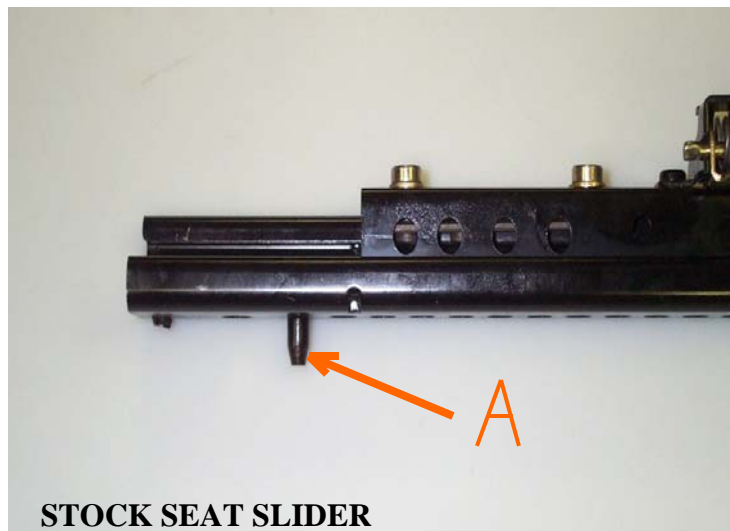

Step 3

Install adapter brackets with four(4) 10 x 20mm flat head screws (see points A). Please note that there is a left and right rear bracket. The flange should point to the outside of the seat.

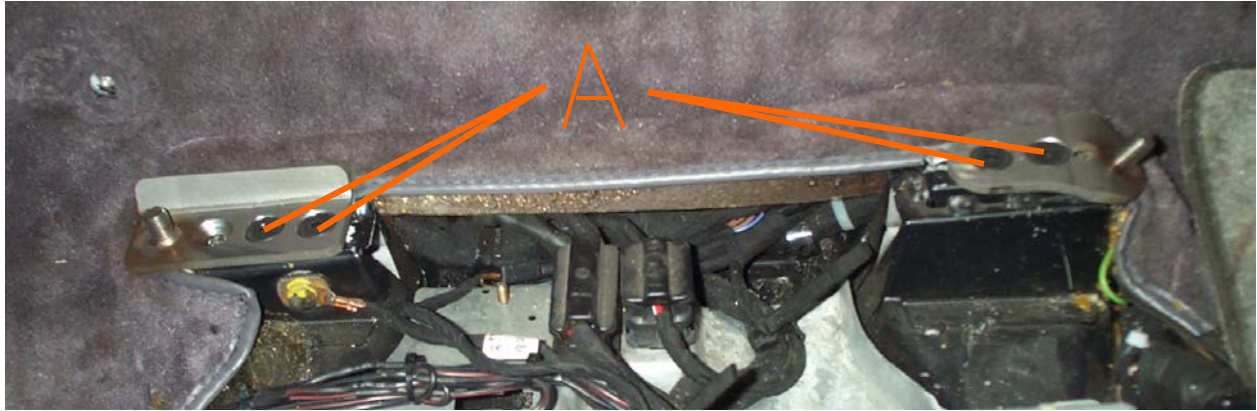

Not shown: Check the center to center distance on the studs. The side to side distance between the studs should be 16". Adjust if necessary.

Step 4

Install the seat rails using the four M10 Flange nuts included.

Note: Manual seats have a center adjuster tube which protrudes below the seat rails at the back of the seat when the seat is fully lowered. In the picture below, the speaker boxes would have to be relocated.

